

**HOW TO DETERMINE THE PROPER COORDINATOR LENGTH FOR VARIOUS OPENINGS**

Hager Standard Coordinator Length	Maximum Active Door Width
32"	28"
42"	38"
52"	48"
60"	56"
66"	62"
72"	68"

**CHART SHOWING EXAMLES OF PROPER COORDINATOR SELECTION BASED ON TOTAL OPENING AND ACTIVE DOOR WIDTH**

(Consult Hager Customer service for proper sizing if not listed below)

Active Door Width	Inactive Door Width	Coordinator Length	Filler Bar Length	Total Opening Width
24"	24"	32"	14-5/8"	48"
36"	12"	42"	4-5/8"	48"
30"	30"	52"	6-5/8"	60"
36"	24"	52"	6-5/8"	60"
36"	36"	52"	18-5/8"	72"
42"	42"	52"	30-5/8"	84"
48"	48"	52"	42-5/8"	96"
56"	56"	60"	50-5/8"	112"
60"	60"	66"	52-5/8"	120"

Note: Once the coordinator length is determined, the Filler Bar Length is determined with the equation below:

**Total Opening Width - Coordinator Length - 1-3/8" = Filler Bar Length**

The 1-3/8" is derived from the subtraction of the 5/8" stops on both sides of the frame plus an extra 1/8" to ensure a proper fit. If stops are not 5/8" wide, please let factory know before ordering.

**5/8" + 5/8" + 1/8" = 1-3/8"**