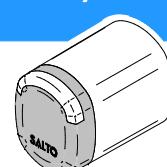


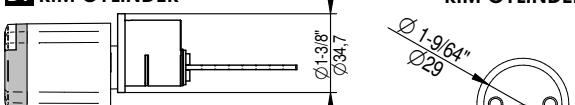
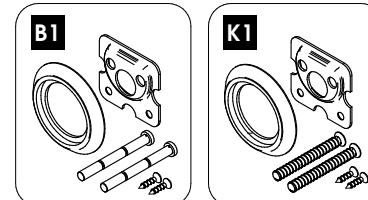
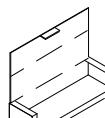
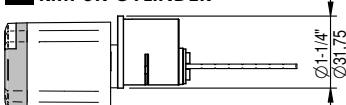
SALTO

inspired access

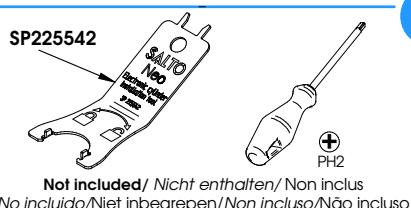
SALTO Neo RIM cylinder

N x B1 1.. series
N x K1 1..

- Eng** Installation guide
E Guía de instalación
D Montageanleitung
F Guide d'installation
NL Installatiehandleiding
I Guida all'installazione

Durability EN 15684
Class 6 cylinder**B1** RIM CYLINDER**K1** RIM UK CYLINDER

LR1 BATTERIES (x4)



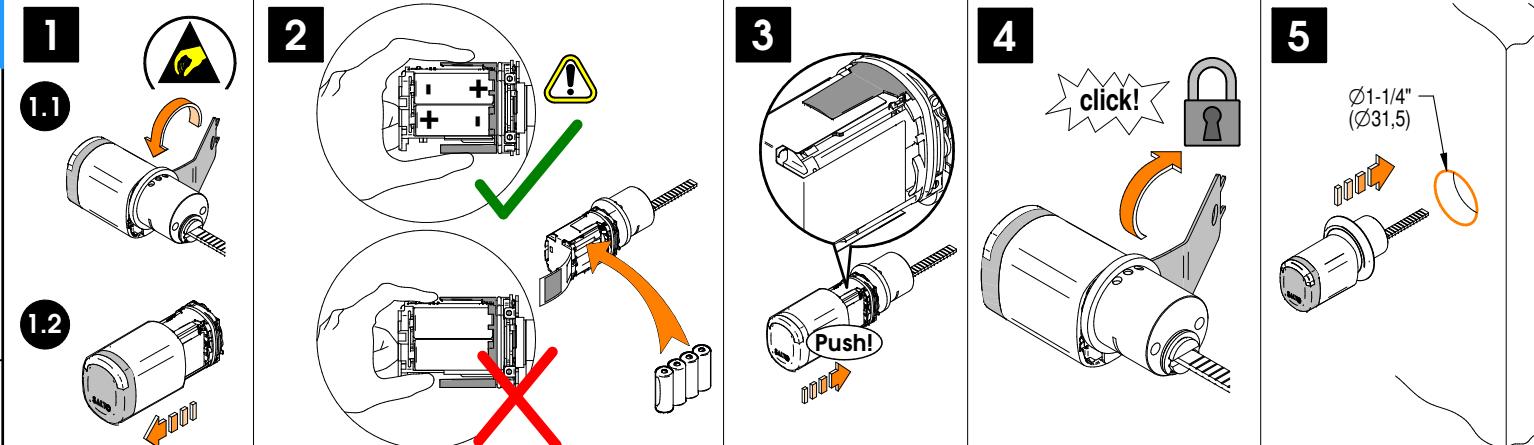
Danger for electronic components due to electrostatic discharge.

www.saltosystems.com/en/quick-links/manuals-and-guides/**SALTO Neo**

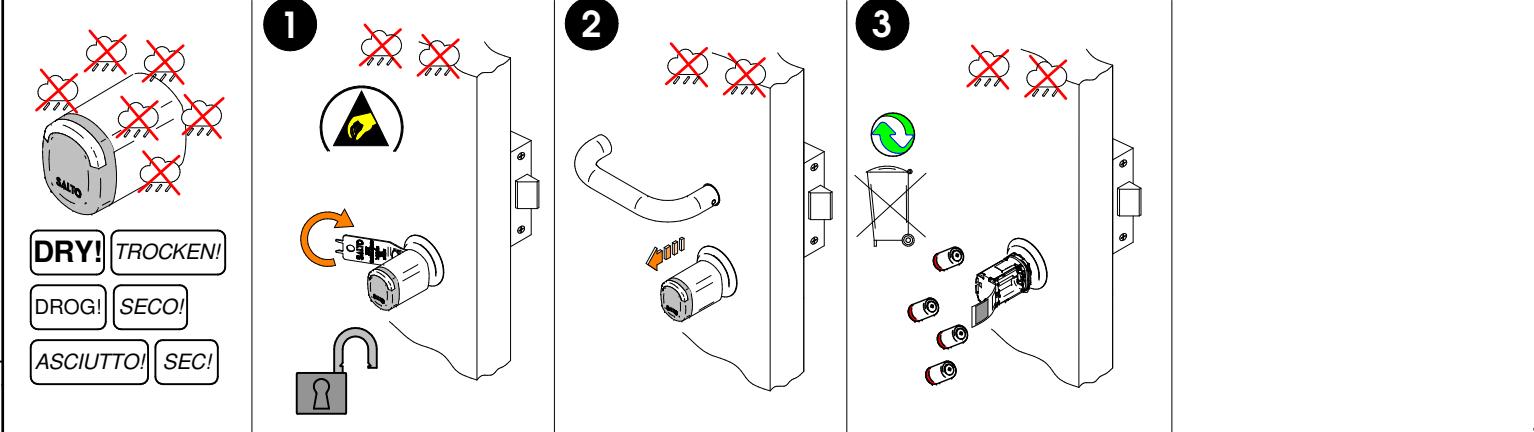
225758-ED.- 24/04/2019

© 2019 SALTO Systems S.L.

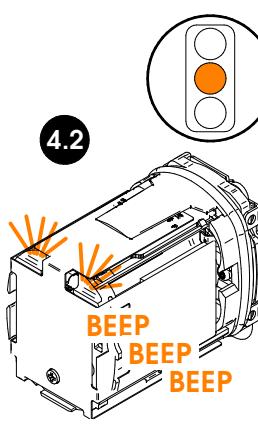
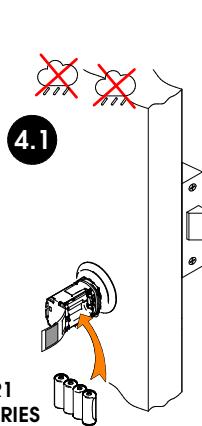
All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.

B1 K1**Eng** Installation **D** Montageanleitung **F** Installation **E** Instalación **NL** Montage **I** Montaggio**6****Eng** If necessary, cut the connecting rod as indicated by the lock.**E** Si es necesario, corte la varilla de conexión como le indica el fabricante de la cerradura.**D** Falls nötig, schneiden den verbundungsstab nach den hinweisen von dem schlosshersteller.**F** Si nécessaire, couper la tige de liaison comme indiqué par le fabricant de serrures.**NL** Knip de staart op de juiste lengte zoals aangegeven door de fabrikant van het oplegslot.**I** Se è necessario, tagliare l'asta di connessione come indica il produttore della serratura.**7****Optional**
Opcional
Wahlweise
Optionnel
Opzionale**K1****B1**

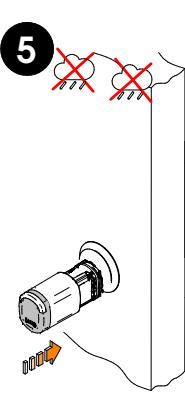
Cut depending on door thickness.

8**AT THIS POINT DO NOT CLOSE THE DOOR
PROGRAM THE CYLINDER FIRST****Eng** TÜRE NICHT SCHLIESSEN,
ZUERST SCHLOSS PROGRAMMIEREN**D** NE FERMEZ PAS LA PORTE,
PROGRAMMEZ LE CYLINDE AVANT**F** EN ESTE PUNTO NO CIERRE LA
PUERTA, PROGRAME PRIMERO EL
CILINDRO**NL** SLUIT DE DEUR NOG NIET!
PROGRAMMEREN EN TEST DE CILINDER
OP EEN CORRECTE WERKING**I** PRIMA DI CHIUDERE LA PORTA,
PROGRAMARE IL CILINDRO**Eng** Battery change **D** Batterie tauchen **F** Remplacer la pile **E** Sustitución pilas **NL** Batterijwissel
I Sostituzione pila

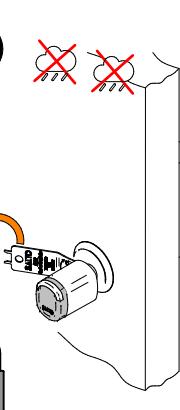
4



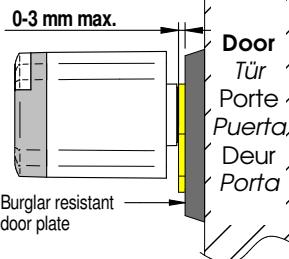
5



6



Eng Installation and use recommendations **D Empfohlene Handhabung und installation** **F Recommandations d'utilisation et d'instalaltion** **E Consejos de uso e instalación**
NL Installatie - en gebruiksinstructies **I Raccomandazioni d'uso ed d'utilizzo**

Eng Outer knob**D Außenknauf****F Bouton extérieure****E Pomo exterior****NL Buitenknoop****I Manopola esterna**

Eng The knob is uniquely paired to the cylinder, and will not work if you switch in a different SALTO cylinder.

D Der Knauf ist eindeutig mit dem Zylinder gekoppelt und funktioniert nicht, wenn Sie einen anderen SALTO-Zylinder verwenden.

F Le bouton du lecteur SALTO est appairer au cylindre. Le cylindre ne fonctionnera pas si vous l'inversé avec un autre cylindre SALTO.

E El pomo está emparejado únicamente al cilindro, no funcionará si lo conecta a otro cilindro SALTO diferente.

NL De knop is is uniek gekoppeld aan de cilinder en zal niet werken als u de knop op een andere SALTO cilinder plaatst.

I Il pomolo è accoppiato univocamente con il corpo del cilindro, non funzionerà il dispositivo se si cambia con un altro cilindro.



Eng Do not place any metallic object in front of reader closer than 5cm.
D Legen Sie kein metallisches Objekt vor dem Leser näher als 5cm.
F Ne placez pas un objet métallique devant le lecteur à moins de 5cm.
E No colocar ningún objeto metálico delante del lector a menos de 5cm de distancia.
NL Geen metalen voorwerpen plaatsen binnen 5cm van de lezer.
I Non posizionare un oggetto metallico davanti al lettore più vicino di 5cm.