HAGER COMPANIES

powered by SALTO

Software Registration

REFERENCE GUIDE

HS4

wireless
real time access control

Minimum Hardware and Software Requirements

For the SALTO Server

Component	Requirement
RAM	8 GB or higher for large installations
Processor	2 GHz or higher for large installations
Display	1024 x 768 high-colour 32-bit display
Hard Disk Space	10 GB *This is the recommended required space to operate a database in a large organization*
Operating System	Windows 7 SP1, Windows 8, Windows 8.1, Windows 10, Windows Server 2008 R2 SP1, or Windows Server 2012R2 (32-bit and 64-bit)
MS SQL Server	Versions 2005, 2008R2, 2012, 2014, 2016, or LocalDB (all editions, including MS-SQL Express). Note that if the SALTO database was originally created with MS SQL Server 2000 and later migrated to a higher version, you must ensure that the database is in compatibility level 90 (version 2005) or higher.
Machine Name Resolver	Domain Name System (DNS)
Domain Environment	A shared network is required and the domain or work group must be set up by the organization's IT administrator. This is strongly recommended as it simplifies security and permission issues.
.NET Framework	Version 4.6.2 (included within the ProAccess SPACE installer)

Minimum Hardware and Software Requirements

For ProAccess SPACE

Component	Requirement
RAM	1GB
Processor	1.6 GHz or higher (x 86 or x 64)
Operating System	Microsoft Windows 10, Windows 8.1, Windows 7 SP1, Server 2012 R2 (32-bit and 64-bit)
.NET Framework	Version 4.6.2 (included within the ProAccess SPACE installer)
Plugin	Silverlight 5
Web Browser	Microsoft Internet Explorer (11 or higher) Due to its compatibility with Silverlight, Microsoft Internet Explorer is the only browser recommended for use with ProAccess SPACE.

Installation Instructions

STEP 1: Visit www.SaltoSystems.com and click on ***SALTO Software Area*** at the top of the page.

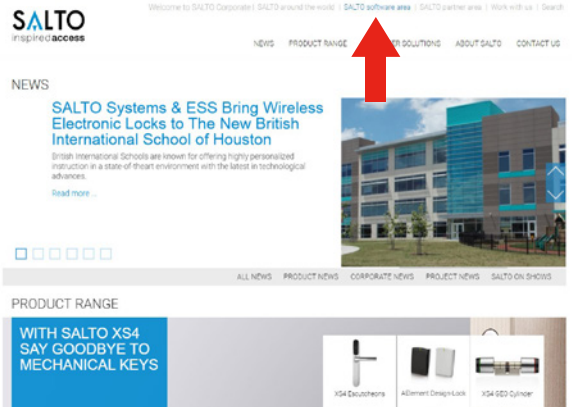

STEP 2: Click on ***Registration*** and register the software.

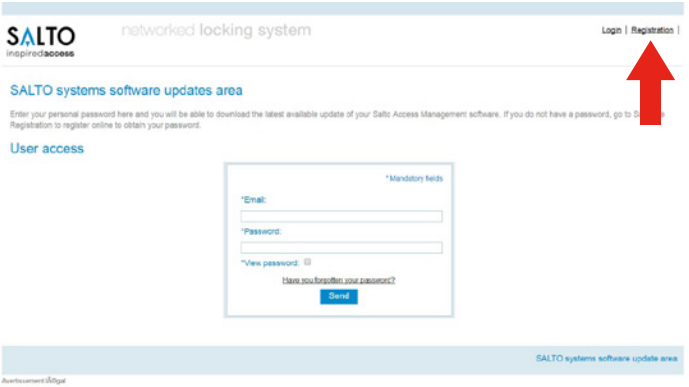

STEP 3: Input the following:

- Technology=E9000 DESfire
- Installation type=SPADEMO followed by the serial number

NOTE: User name and password are case sensitive!

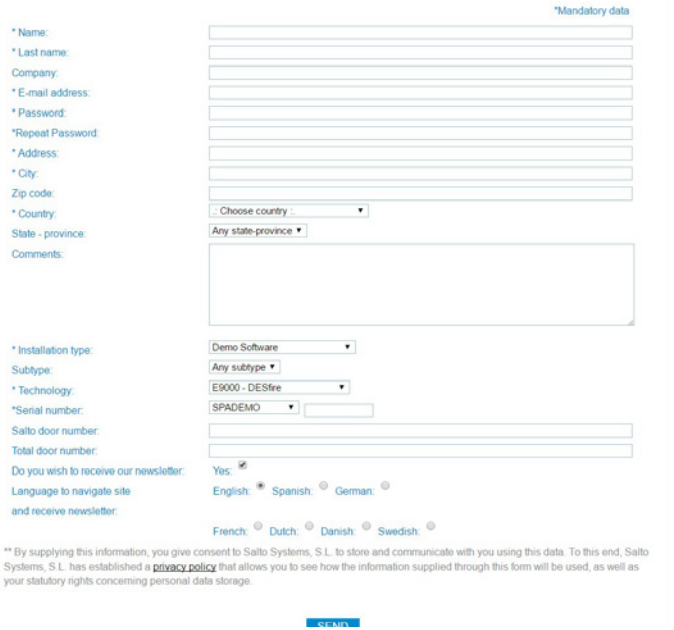

STEP 4: Click ***send***.

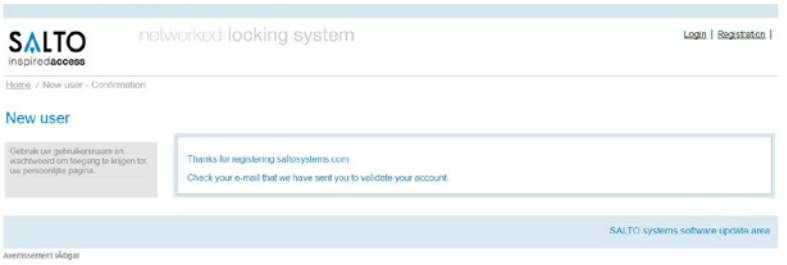

STEP 5: Finish registration by clicking the link in your email. You will be taken to the following page. When there, click ***login***.

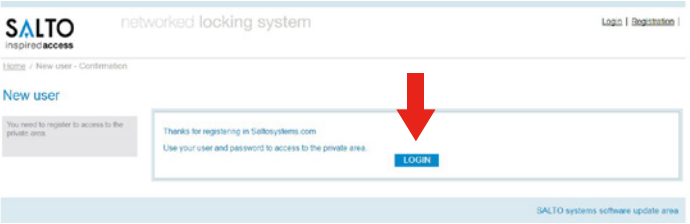

STEP 6: In the software area, scroll down to the software associated with the account. Here you will find the resources to ***download the software***, the ***user manual for ProAccess SPACE***, and ***videos on how to complete the installation of the demo software***.

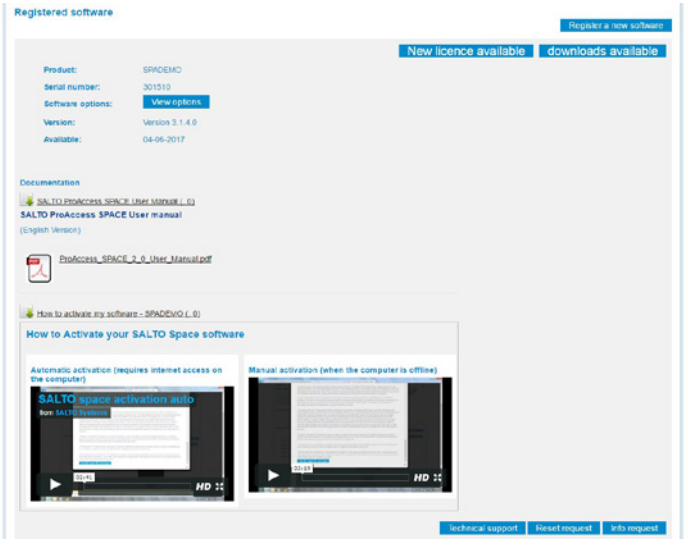

©2017 Hager Companies.All rights reserved.

www.hageraccesscontrol.com