


## INSTRUCTION FOR INSTALLATION OF DUMMY LEVER/KNOB (TYPE 78)

---

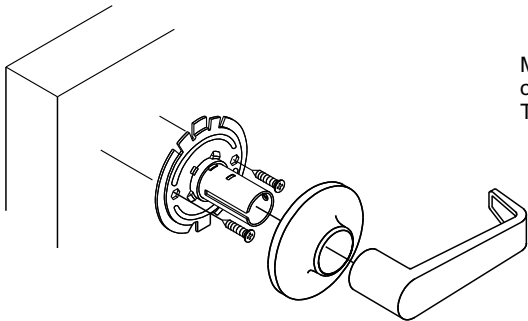

Measure 38" from bottom  
of door or any suitable height.  
Tighten screws to fix directly.

---