


PARALLEL ARM TEMPLATE INSTRUCTIONS

5100 Series Hold Open
Door Closers (180 Deg.)
T-CL00058

01+

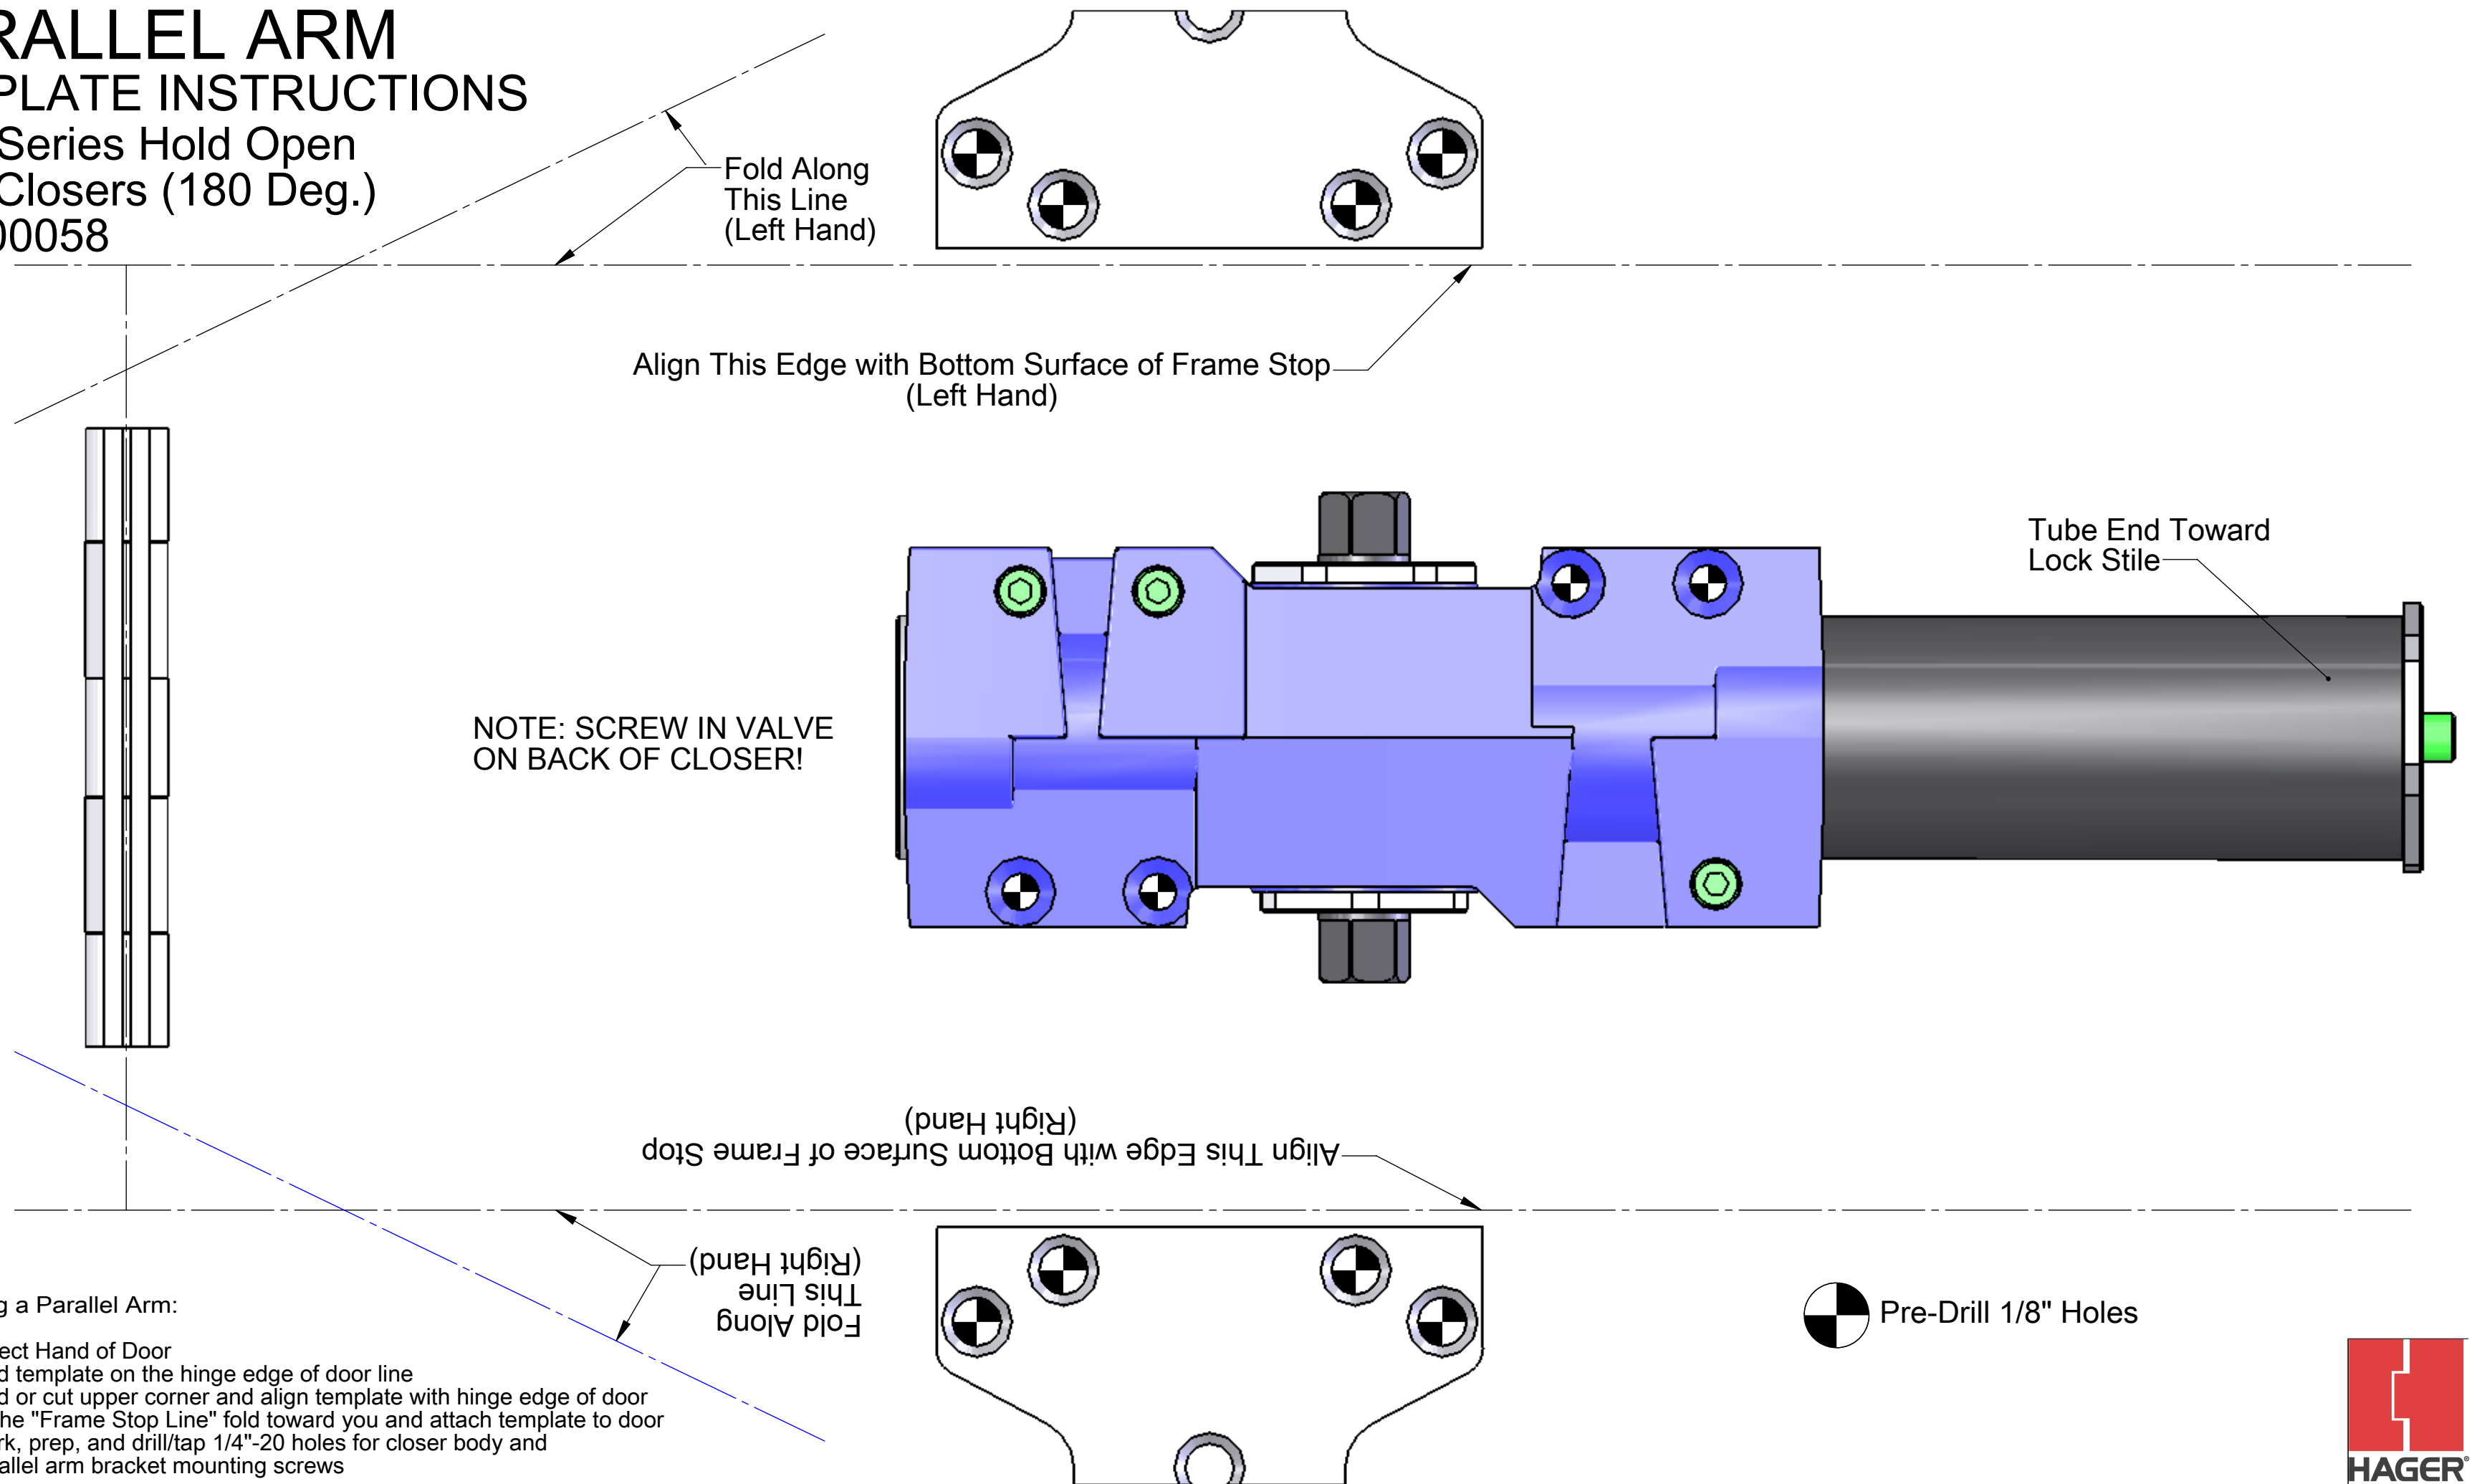

Installing a Parallel Arm:

- Select Hand of Door
- Fold template on the hinge edge of door line
- Fold or cut upper corner and align template with hinge edge of door
- At the "Frame Stop Line" fold toward you and attach template to door
- Mark, prep, and drill/tap 1/4"-20 holes for closer body and parallel arm bracket mounting screws

