

Wood Door Preparation for SALTO DBolt Touch /SALTO DBolt Auto


Préparation des Portes en Bois pour SALTO DBolt Touch /SALTO DBolt Auto

Mec. Puerta Madera Escudo SALTO DBolt Touch /SALTO DBolt Auto




i

DOOR	WOOD
DEADBOLT FRONTPLATE	SQUARE CORNER 1-1/8" (28,5mm)
BACKSET	2-3/8" (60mm) 2-3/4" (70mm)

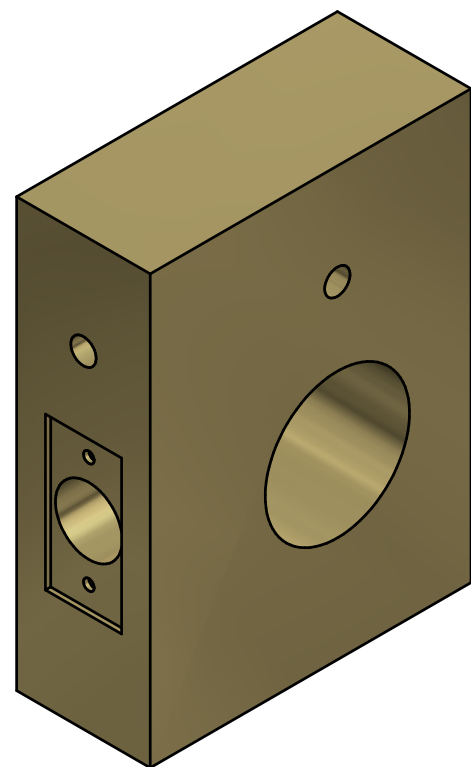

#8 Full-Threaded Wood Screws
3/32" Pilot Hole
To be field drilled

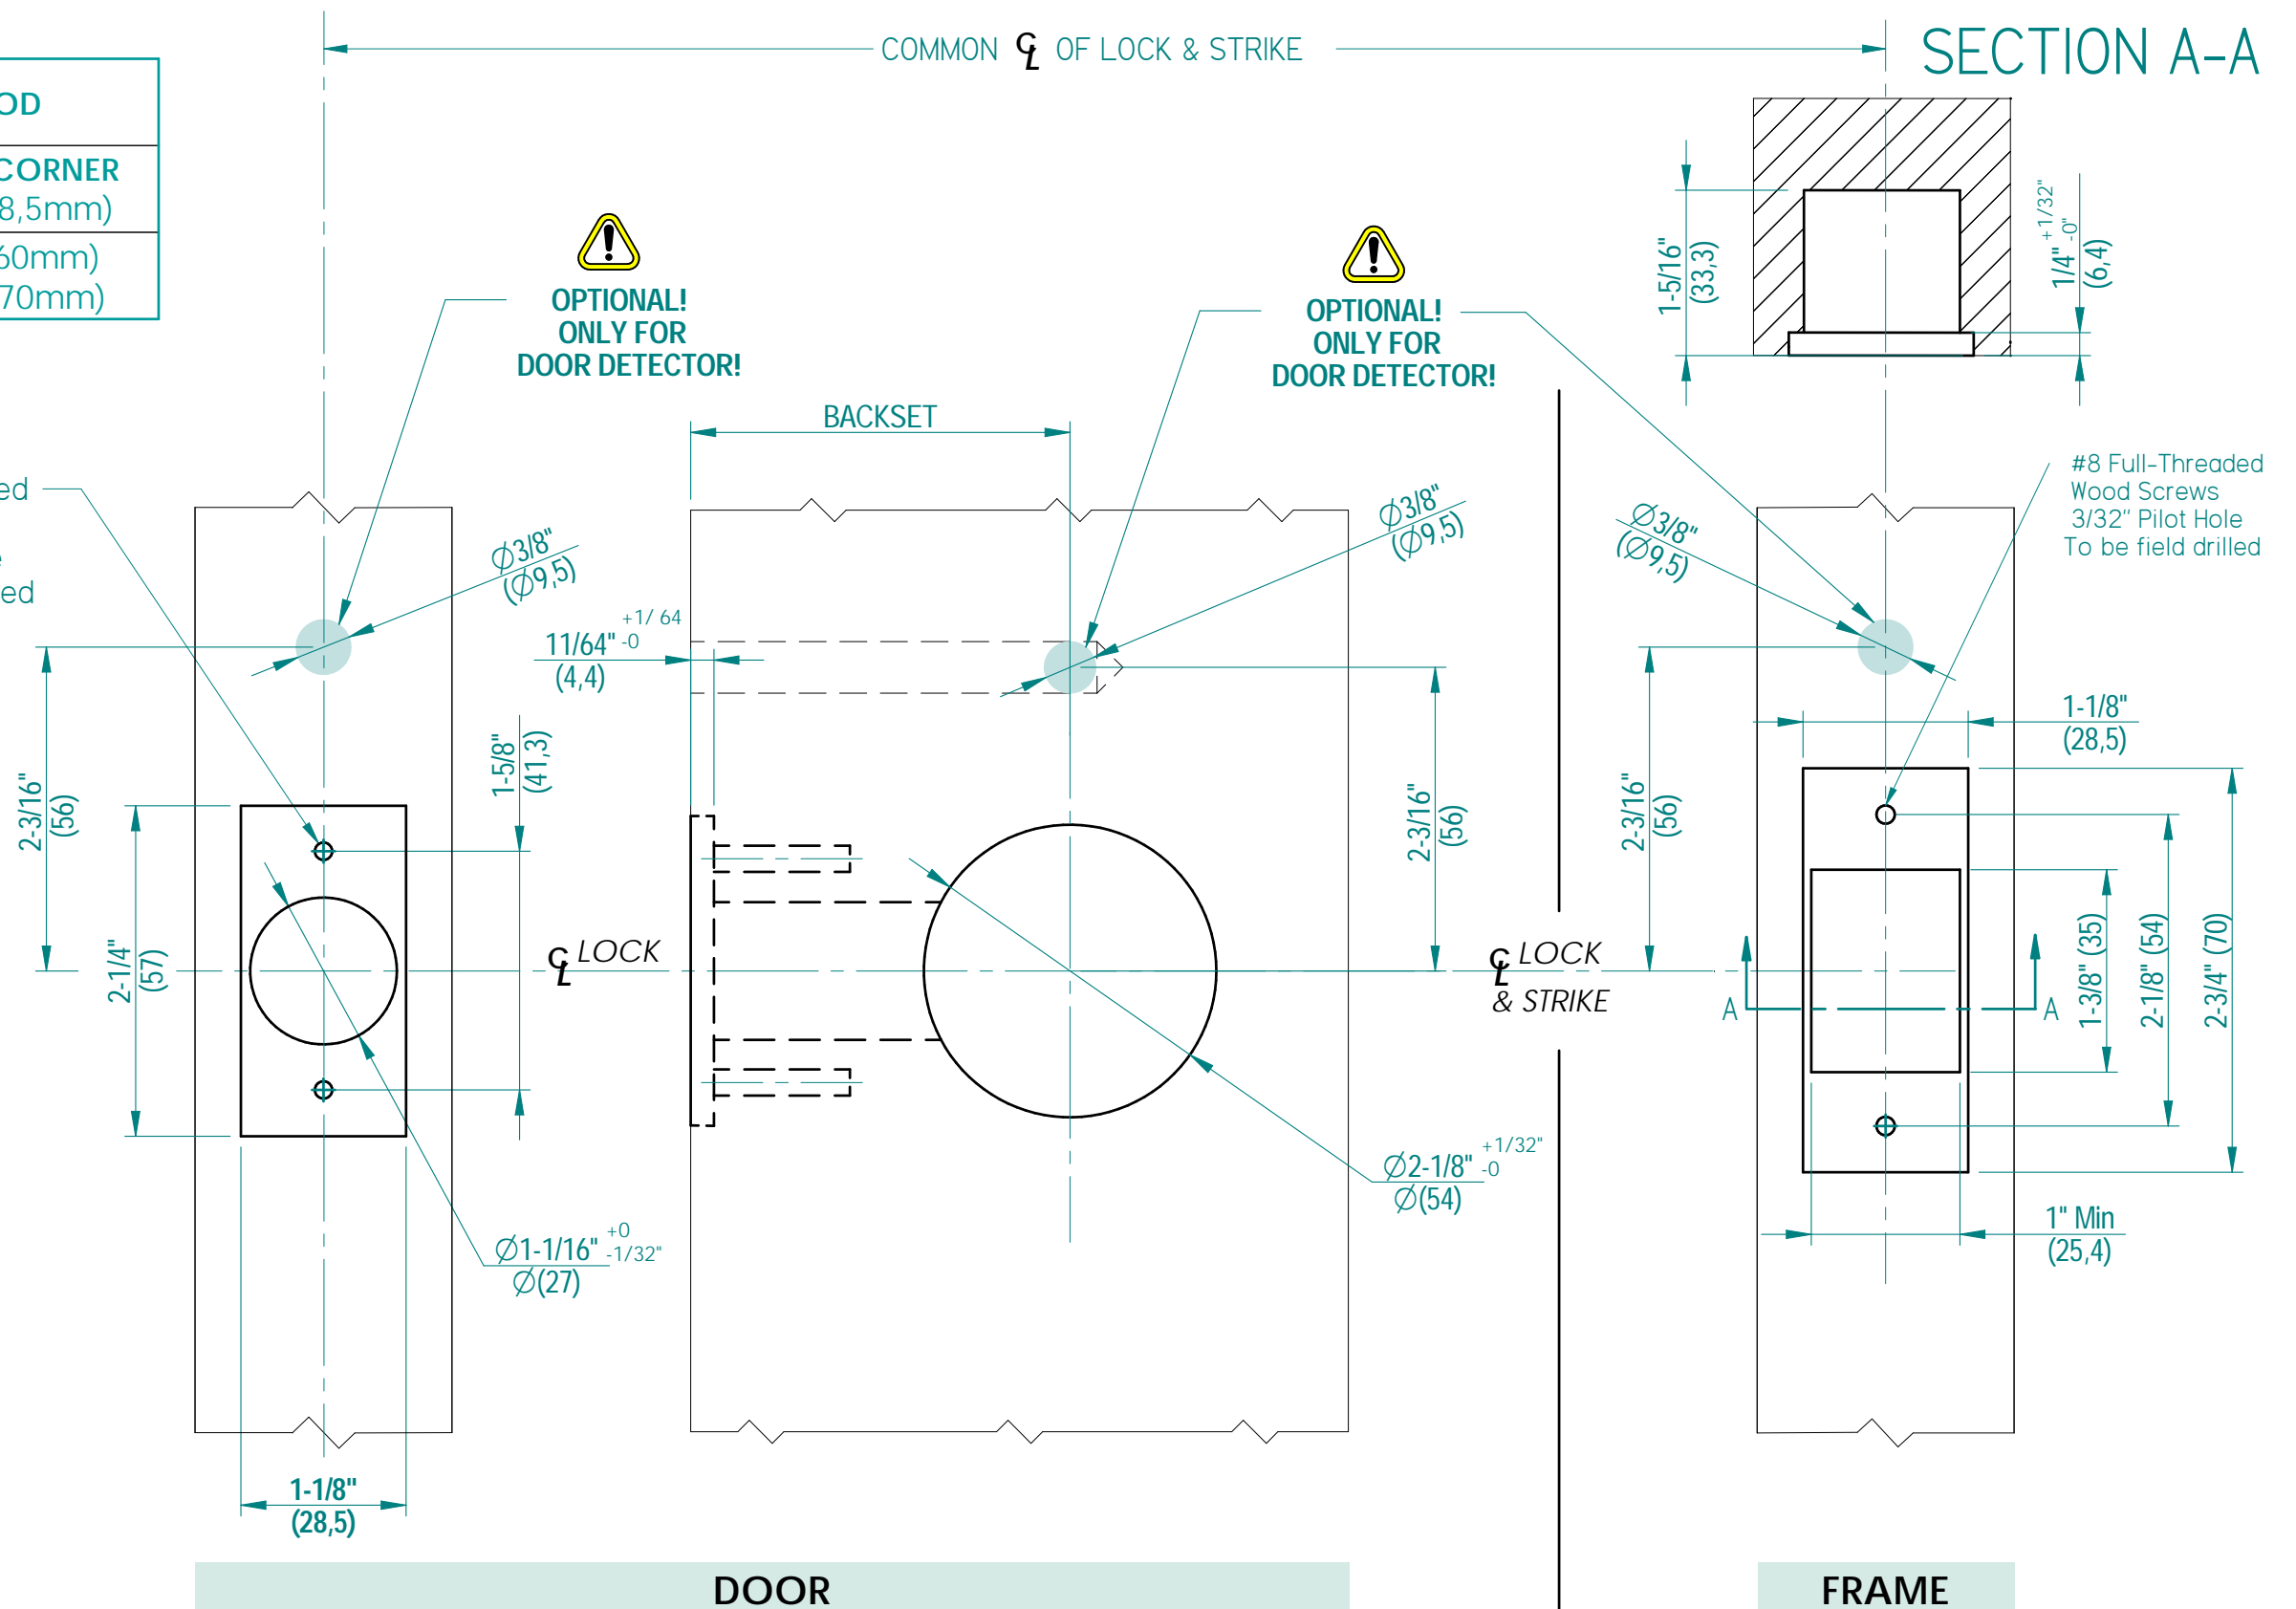

Wood Door Preparation for SALTO DBolt Touch /SALTO DBolt Auto


Préparation des Portes en Bois pour SALTO DBolt Touch /SALTO DBolt Auto

Mec. Puerta Madera Escudo SALTO DBolt Touch /SALTO DBolt Auto




i

DOOR	WOOD
DEADBOLT FRONTPLATE	SQUARE CORNER 1" (25,4mm)
BACKSET	2-3/8" (60mm) 2-3/4" (70mm)

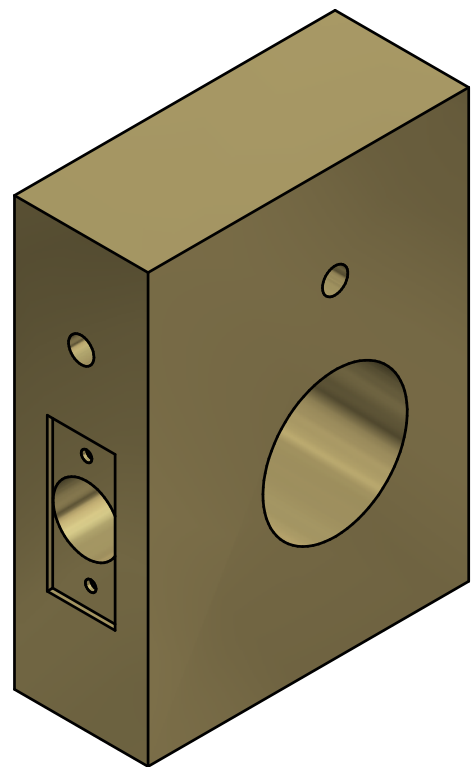

#8 Full-Threaded Wood Screws
3/32" Pilot Hole
To be field drilled

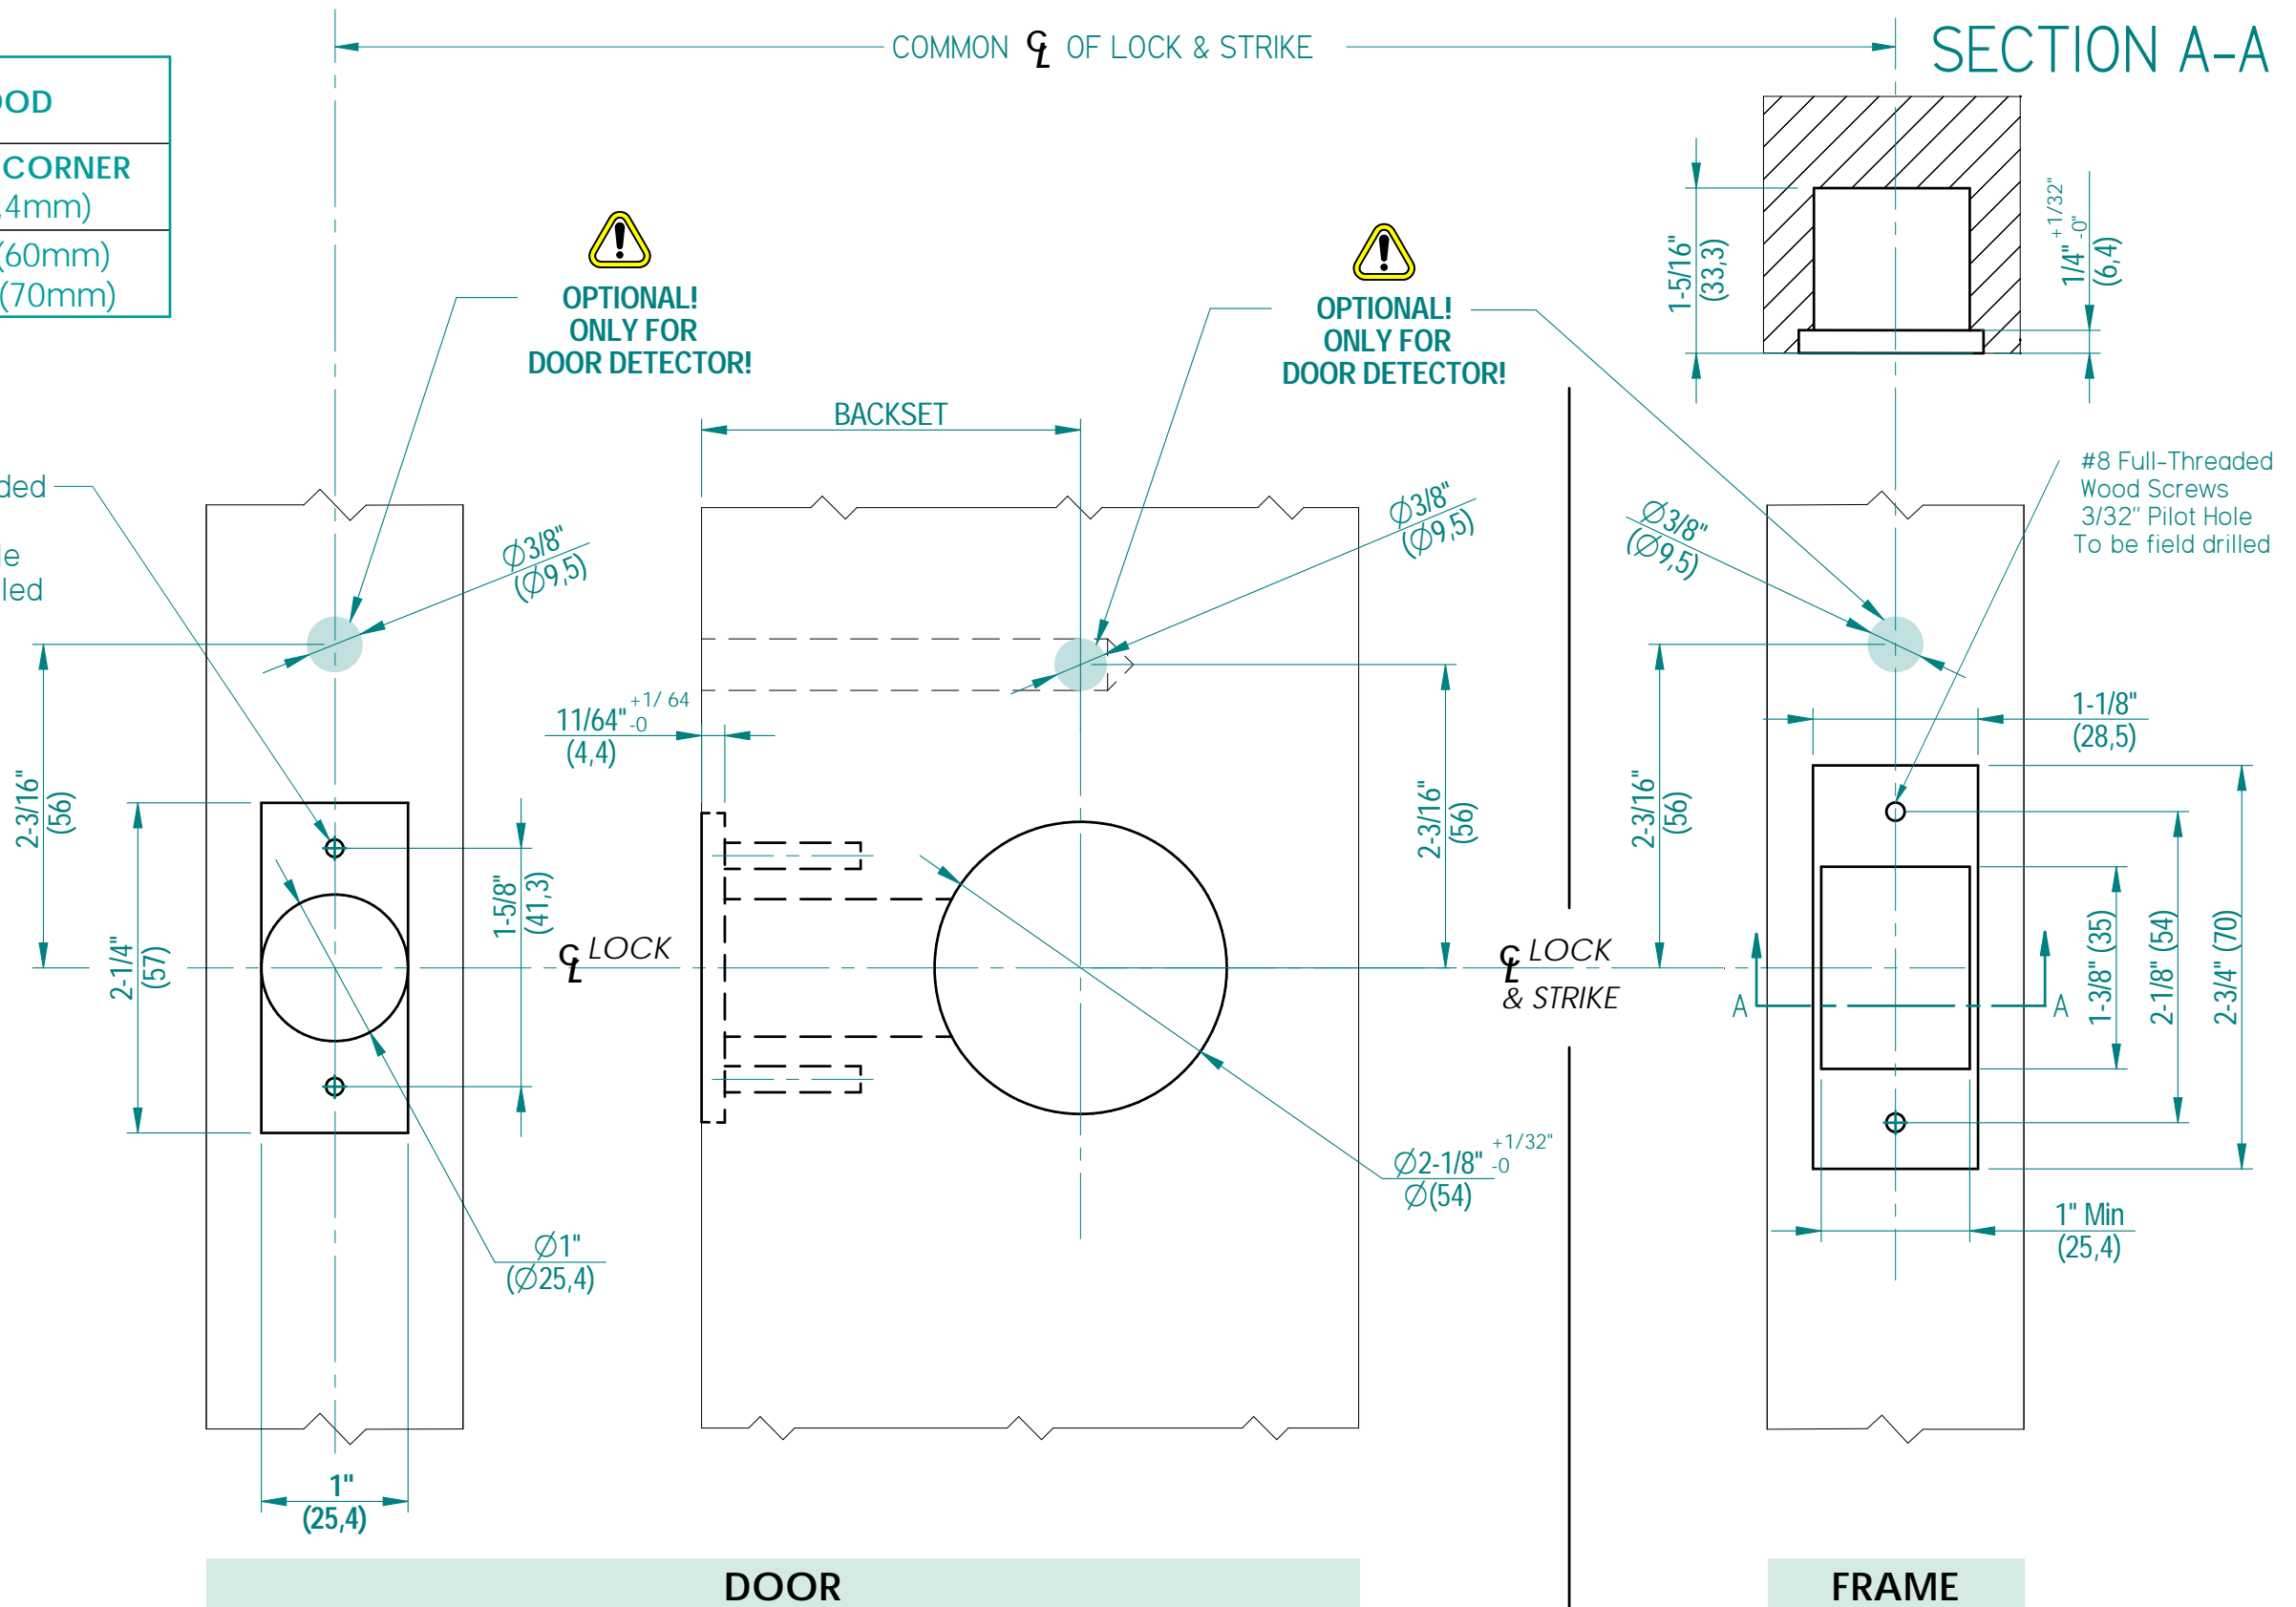

Wood Door Preparation for SALTO DBolt Touch /SALTO DBolt Auto

Préparation des Portes en Bois pour SALTO DBolt Touch /SALTO DBolt Auto

Mec. Puerta Madera Escudo SALTO DBolt Touch /SALTO DBolt Auto

i

DOOR	WOOD
DEADBOLT FRONTPLATE	R1/4" ROUND CORNER 1" (25,4mm)
BACKSET	2-3/8" (60mm) 2-3/4" (70mm)

