
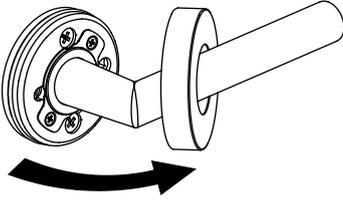
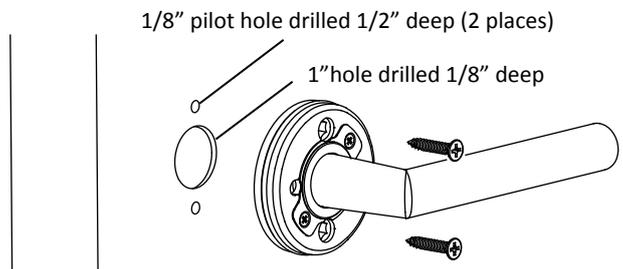


Recommended for use on doors 1-3/8"-1-3/4" (35mm-45mm) thick



Tools required for installation:

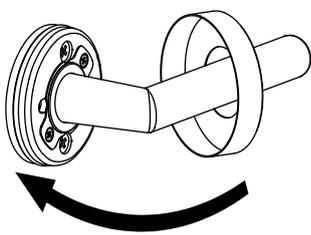

## 2317 SINGLE DUMMY INSTALLATION INSTRUCTIONS

1. REMOVE ROSE	2. PREP DOOR & INSTALL LEVERSET	3. INSTALL ROSE
	 <p>1/8" pilot hole drilled 1/2" deep (2 places)            1" hole drilled 1/8" deep</p> <ol style="list-style-type: none"> <li>1. Drill 1" dia. hole at desired height.</li> <li>2. Using leverset as a guide, mark and drill pilot holes.</li> <li>3. Tighten leverset to the door face using screws provided.</li> </ol>	

## 2327 DOUBLE DUMMY INSTALLATION INSTRUCTIONS

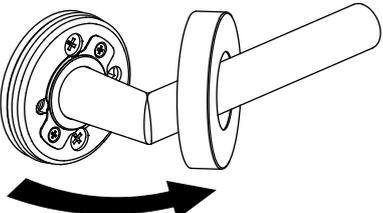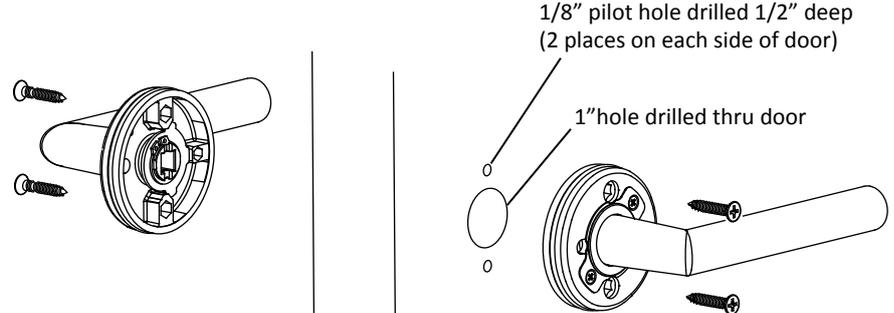1. REMOVE ROSES	2. PREP DOOR & INSTALL LEVERSETS	
	 <p>1/8" pilot hole drilled 1/2" deep (2 places on each side of door)            1" hole drilled thru door</p> <ol style="list-style-type: none"> <li>1. Drill 1" dia. hole completely thru the door at desired height.</li> <li>2. Using inside leverset as a guide, mark and drill pilot holes on inside door face.</li> <li>3. Repeat step 2 for outside leverset.</li> <li>3. Tighten both leversets to the door face using screws provided.</li> </ol>	
<h3>3. INSTALL ROSES</h3> 