
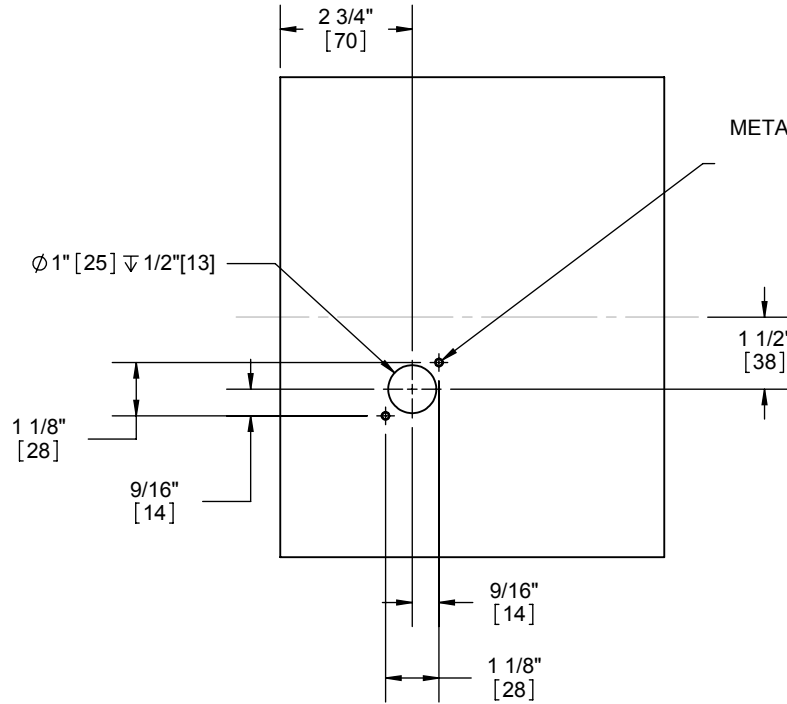



DOOR EDGE:  
NO MODIFICATIONS  
REQUIRED



METAL: DRILL/TAP FOR #8-32 MOUNTING SCREWS  
 $\varnothing .136 \nabla .656$ ,  $\square \varnothing .164 [4] \nabla .500$   
 WOOD: PRE-DRILL  $\varnothing 1/8$ " HOLES  
 (2 PLACES)

**OUTSIDE**

( RH, RHR SECTIONAL SHOWN)

 <p><b>PROPRIETARY &amp; CONFIDENTIAL</b>          THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAGER COMPANIES. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF HAGER COMPANIES IS PROHIBITED.</p>	<p>HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.</p>	DRAWN	TJS	9/21/07	<p>3800          3800 SECTIONAL DOOR PREP,          FUNCTIONS: 17</p>		
		ENG. APPR.	-	-			
		MATERIAL	-	Q.A.			
		FINISH	-	<p>TOLERANCES:          FRACTIONAL: <math>\pm 0.015</math>"          ANGULAR: MACH: <math>\pm 1^\circ</math> BEND: <math>\pm 1^\circ</math>          TWO PLACE DECIMAL: <math>\pm 0.01</math>"          THREE PLACE DECIMAL: <math>\pm 0.004</math>"</p>			SIZE
DO NOT SCALE DRAWING					<b>A</b>	T-LS00771	<b>04</b>
					SCALE: 1:4	WEIGHT: -	SHEET 1 OF 14