


3800U Series Mortise Locks Installation Template

TOP!

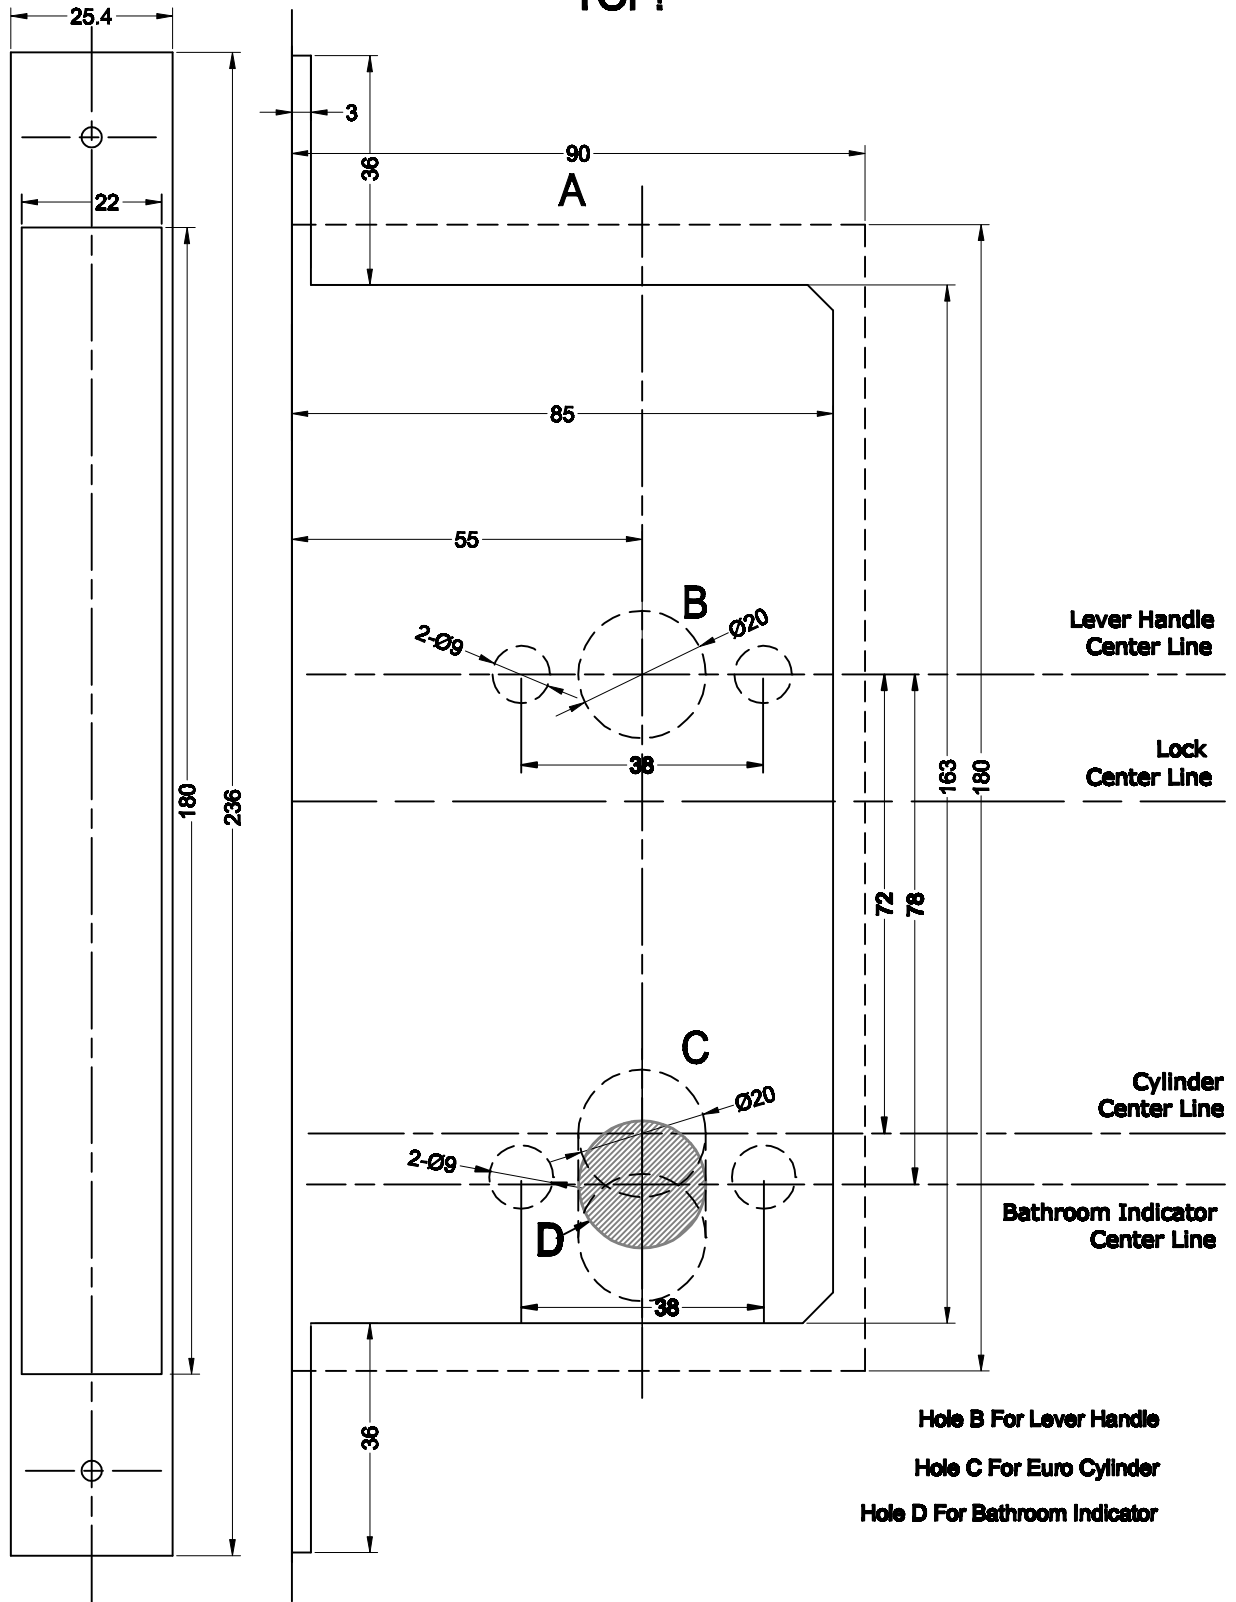

Hole B For Lever Handle
 Hole C For Euro Cylinder
 Hole D For Bathroom Indicator