


Template for 9459 Barn Door Lock

T-SD00394 Rev-01
 9459 TEMPLATE
 SHEET 1 of 2
 03/09/2021

For installing lock on left jamb of doorway (see other side for right jamb installation)

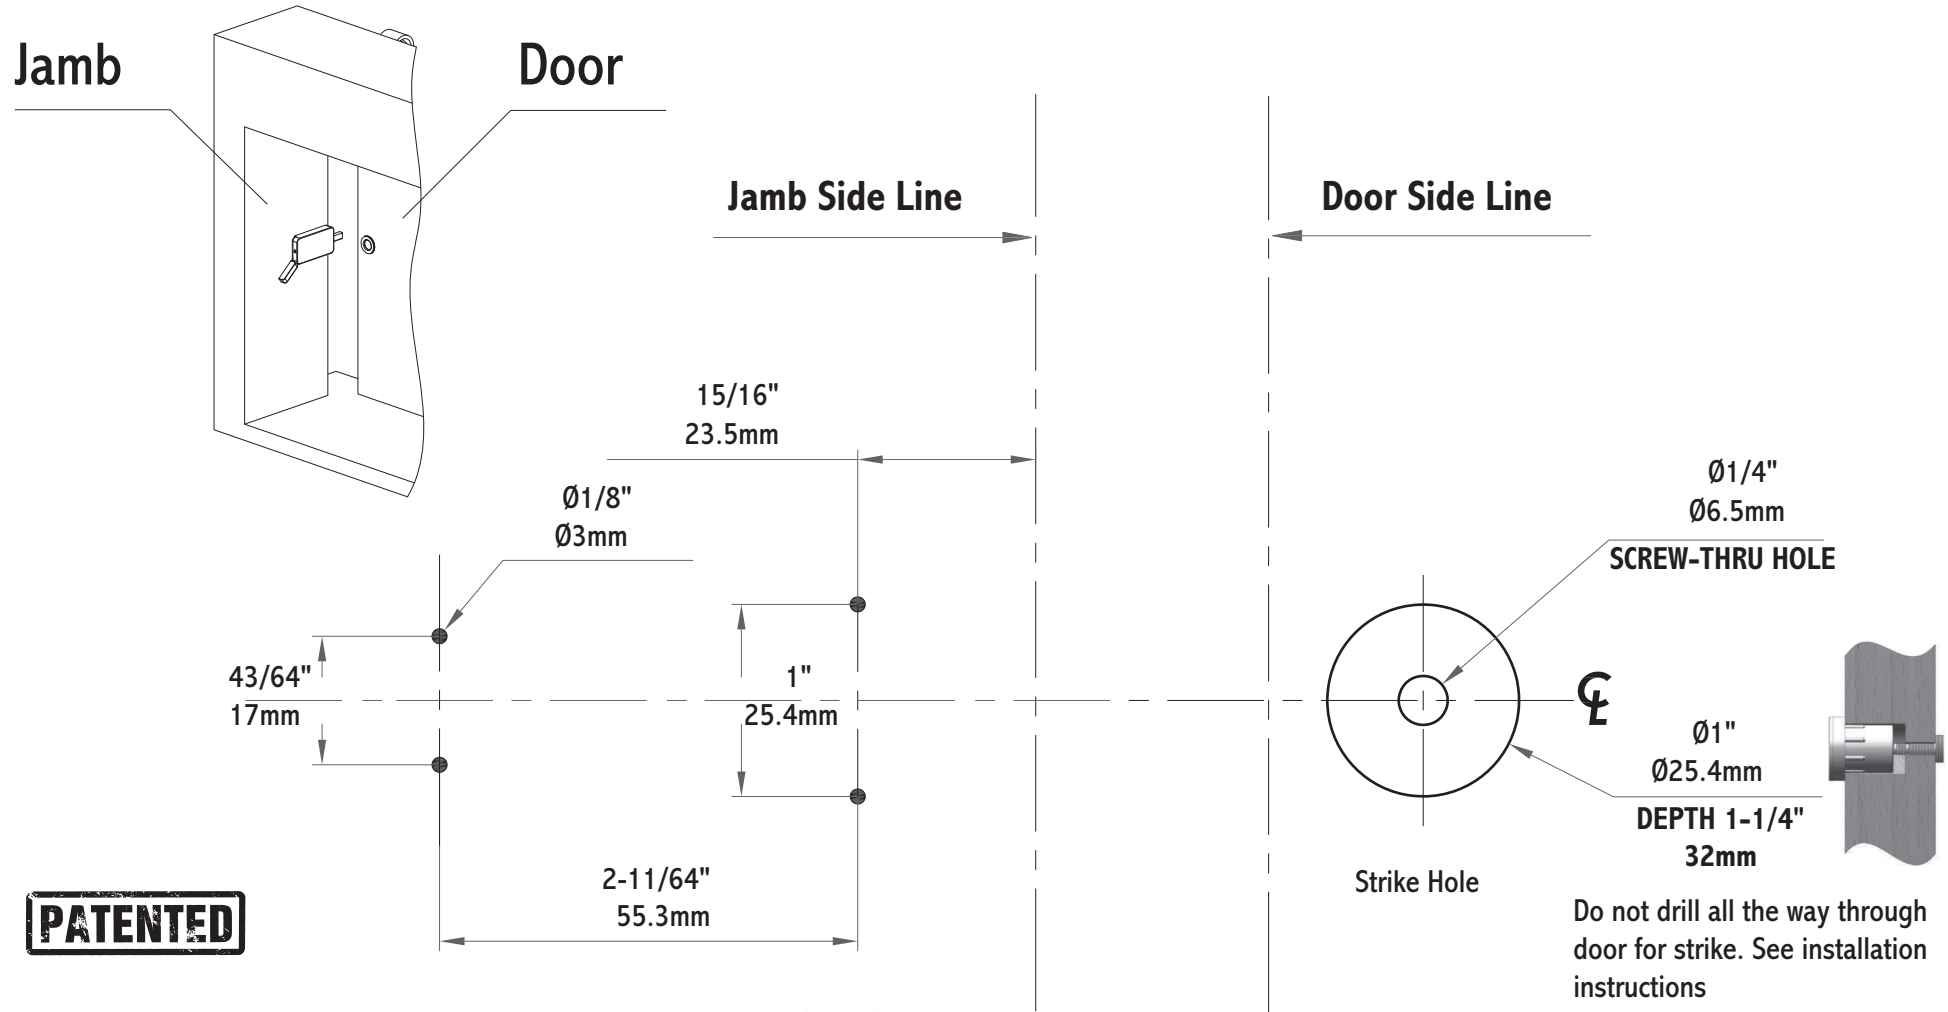

PATENTED


** Install no more than 41" from floor.



REV.	DESCRIPTION	ECO NO.	DATE
1	T-SD00394 - 9459 Template SHEET 1 OF 2	-	03/09/2021

Template for 9459 Barn Door Lock

For installing lock on right jamb of doorway (see other side for left jamb installation)

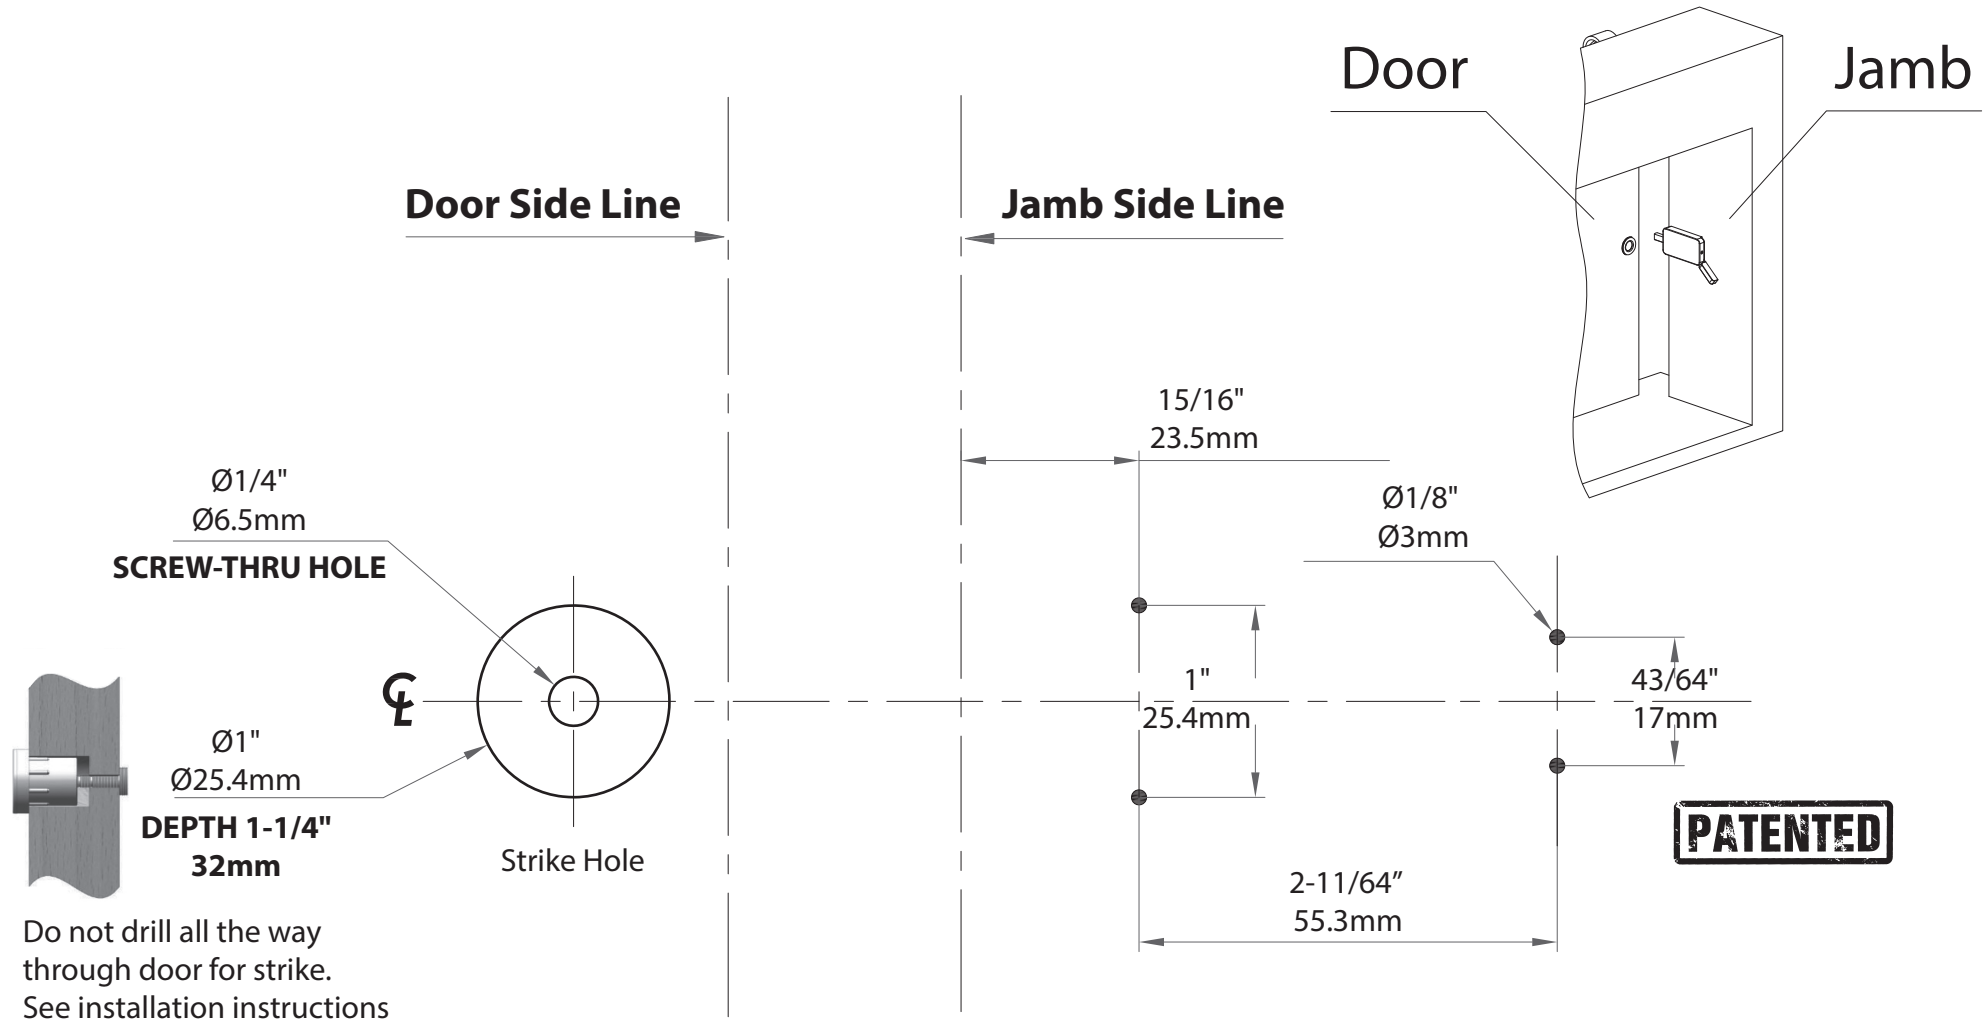

Do not drill all the way through door for strike. See installation instructions

** Install no more than 41" from floor.



REV.	DESCRIPTION	ECO NO.	DATE
-	T-SD00394 - 9459 Template SHEET 2 OF 2	-	03/09/2021