

1

2


3

4

NOTE:  
THIS MUST BE PRINTED ON AN 8.5" x 11" SHEET PAPER

REV	DATE	EDITOR	ECO NO.	CHANGE DESCRIPTION
01	29 Mar 2021	MA		Updated Note
-	29 Mar 2021	MA		Corrected Rev Level
-	28 Sep 2020	MA		Initial Check-In

1. CUT THE TEMPLATE ALONG THE DOTTED LINES
2. PLACE THE TEMPLATE ON THE DOOR
3. MARK/DRILL THE HOLES

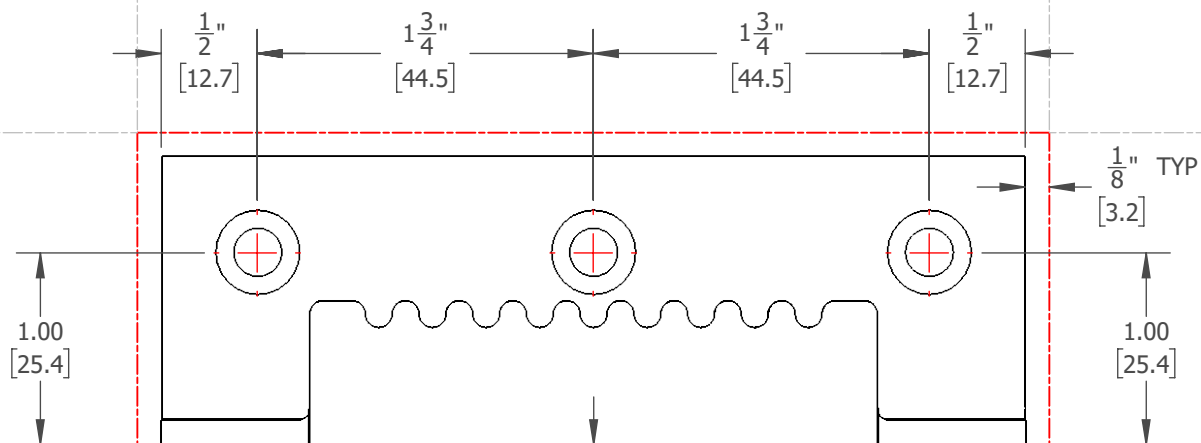

FOR LH DOORS,  
PLACE THIS CORNER  
ON THE BOTTOM CORNER  
OF THE DOOR, OPPOSITE  
TO THE HINGES

$\frac{1}{8}$ " TYP  
[3.2]

PLACE THIS ON THE  
BOTTOM OF THE DOOR

FOR RH DOORS,  
PLACE THIS CORNER  
ON THE BOTTOM CORNER  
OF THE DOOR, OPPOSITE  
TO THE HINGES



**PROPRIETARY & CONFIDENTIAL**  
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAGER COMPANIES. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF HAGER COMPANIES IS PROHIBITED.

HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.

ALL DIMENSIONS REFERENCE UNLESS TOLERANCE SPECIFIED.

UNITS: INCH = AUTHORITY  
[ ] = MILLIMETER REFERENCE

DO NOT SCALE

DRAWN BY: MA 9/28/2020

ENG. APPR.: 

 THIRD ANGLE PROJECTION

MATERIAL:

FINISH:

WEIGHT: 0.09 lbs

SERIES NO. 190L PART NO. 190L

PART DESCRIPTION:  
190L Architectural Finish Foot Pull

DRAWING NO. T-TA01270 REVISION 01

SHEET SIZE: A SCALE: 1:1 SHEET 1 OF 1